



XEF-Lite User Manual

General Mode	
F1.4	F1.6
Shoot Mode	To Enter Configure Mode

How to Enter Configure Mode to Adjust Focus

- Change Exposure Level Increments to 1/3-stop (at C.Fn)
- Use M mode. (Manual Exposure)
- Dial Camera Body Aperture at F1.6.
- Dial Shutter speed at 4" sec.
- Hit the shutter button.
- Now you can see we have f1.4, f1.6, f1.8, f2.0, f2.2. Can be dial, Means have already Enter Configure Mode.

Configure Mode				
F1.4	F1.6	F1.8	F2.0	F2.2
Shoot Test	Move Away	Move Close	Reset	Save and Exit
Shutter	Use DOF (depth of field) button to trigger function			

How to Adjust Focus Accuracy

- Dial aperture at F1.4, take photo, to check focus accuracy.
- Dial at F1.6 or F1.8, press DOF button, to adjust focus accuracy.
- Back to F1.4, take another photo, check adjustment result, if not accurate, go back to step B to adjust more.
- If Adjust too much, don't know where you are, dial at F2.0 to reset adjustment value.
- Dial at F2.2, press DOF button, save adjustment result and exit configuration.

P.S. Trigger shutter at F1.6, F1.8, F2.0, F2.2 will trigger DOF action on Canon camera, would also trigger configuration functions. So dial at F1.4 to use shutter button to take photo for viewing test result.

P.S. If want to cancel setting just remove the adapter from body, chip would come back general mode.